



MXR USB 2.0 Webcam Vista Installation Guide


1. Download and extract the *MXRCameraDriver.zip* to Windows VISTA desktop.
2. Plug in MXR USB 2.0 Camera. Then Vista shall prompt “finding new hardware” and the following screen to suggest the methods to install the driver. Click “Cancel”.

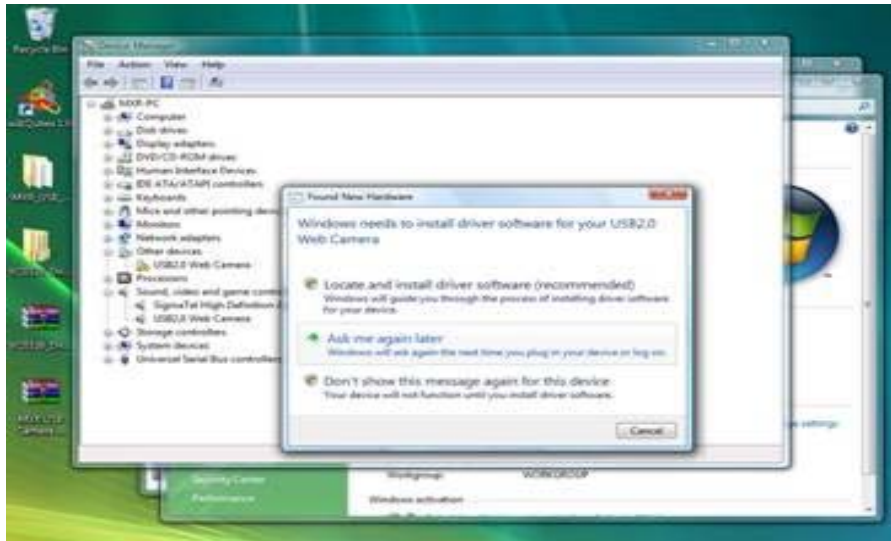

3. Administrators can access Device Manager through *Control Panel\System and Maintenance\System*. Then in the “Device Manager”, right click on the icon of USB 2.0 web camera, choose “Update Driver Software”.

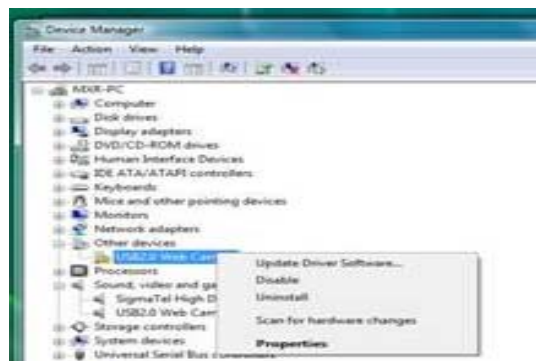


4. Click “Browser my computer” for camera driver software. Then locate the folder where you extract *MXRCameraDriver.zip* as done in Step 1. Click “next”.

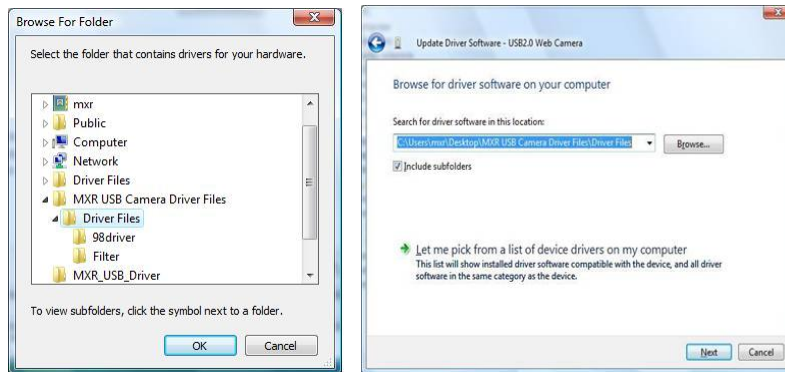

5. Choose “install this driver software anyway”:



6. Wait for a while for the installation to be completed. After installation, “MXR USB 2.0 Camera” will appear in device manager.

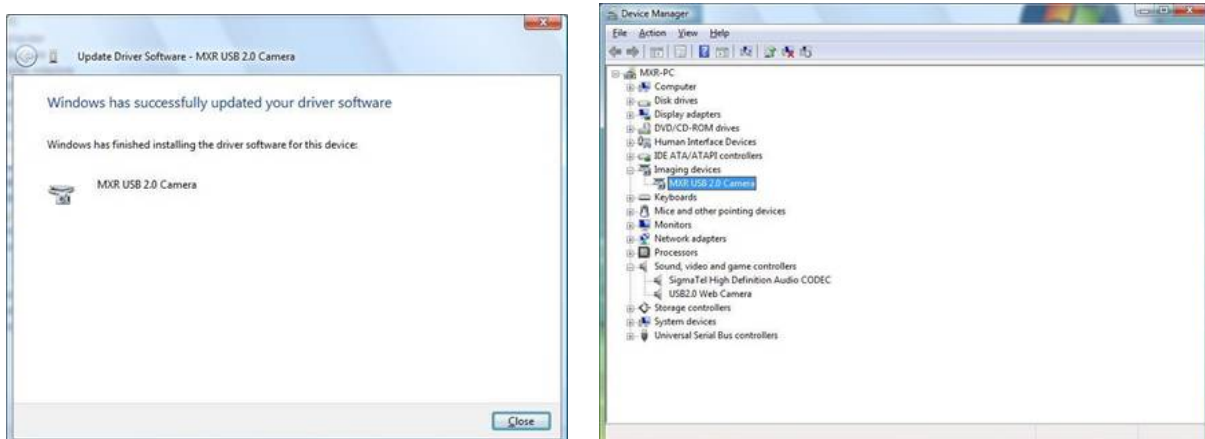

7. You can now install wIzQubes 1.0 by inserting the CD-Rom. DONNOT install the camera driver again as it was designed for Windows XP.

8. Please note that Vista requires higher system configurations than Windows XP, therefore, the minimum requirements of your PC to run wIzQubes may be higher than those stated on the wIzQubes packaging.